

# **VENTLJUS**












5m PARTYTÄLT

Sida 2-5 innehållsförteckning






 




Sida 6 Takduksmontering

Sida 7-8 Monteringsanvisning








## 5m -2.3 PARTY TENT SEMI PRO, CombiTent

		NO	5x6	5x8	5x10	5x12	5x14
Pipe 2188mm 50-50 with holes		1	4	6	8	10	12
Pipe 1880mm 38-38		2	15	20	25	30	35
Pipe 1880mm 38-38 with hole		3-1	2	2	2	2	2
		3-2	2	2	2	2	2
Pipe 1940mm 50-50		4	8	10	12	14	16
Pipe 435mm 50-50		5	8	10	12	14	16
Pipe 1174 mm 25-25		6	4	4	4	4	4
Pipe 880mm 38-38		7	2	2	2	2	2
Pipe 2188mm 50-50 with holes and a hole		8	4	4	4	4	4
connector two way		9	8	10	12	14	16
connector Three way 110°54-42		10	4	4	4	4	4
connector Three way 140°54-42		11	2	2	2	2	2




## 5m -2.3 PARTY TENT SEMI PRO, CombiTent

connector four way 140 °54-42		12	2	3	4	5	6
connector four way 110 °54-42		13	4	6	8	10	12
Connector three way –foot for the corners 54-42		16	2	2	2	2	2
Connector three way –foot for the corners 54-42		17	2	2	2	2	2
Connector three way –foot for the sidewalls 54-42		18	4	6	8	10	12
Connector three way –foot for the endwalls 54-42		19	4	4	4	4	4
Groundpegs		20	4	6	8	10	10
Screw hook		21	4	4	4	4	4
Groundpeg 6x300mm		22	8	10	12	14	16
Groundpeg 4x180mm		23	36	42	48	54	60

### 5m -2.3 PARTY TENT SEMI PRO, CombiTent

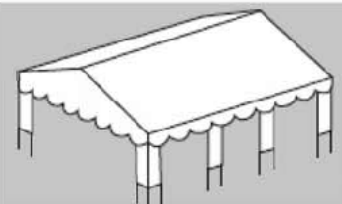Screw M8X45mm		24	46	56	66	76	86
Screw M8X60mm		25	50	64	78	92	106
M8 Locknuts		26	96	120	144	168	192
spanner		31	1	1	1	1	1
Long bungeeball		33	88	106	124	142	160
rope		35	4	4	4	4	2
roof		37	1 (2 Sections)	1 (3 Sections)	1 (4 Sections)	1	1


## 5m -2.3 PARTY TENT SEMI PRO, CombiTent

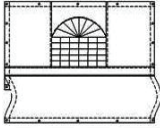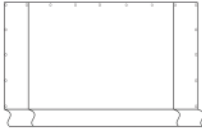 sidewall		38	6	8	10	12	14
endwall with large door		39	1	1	1	1	1
endwall with small door		40	1	1	1	1	1


# 5m -2.3 PARTY TENT SEMI PRO, COMBITENT

## CombiTent roof explained


5x6

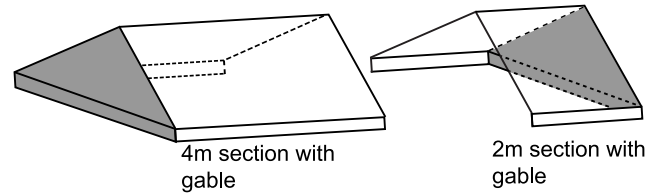


5x8

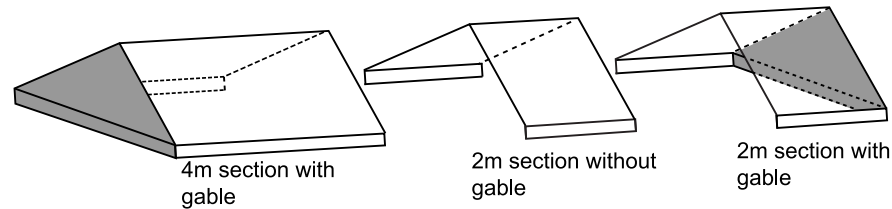


5x10

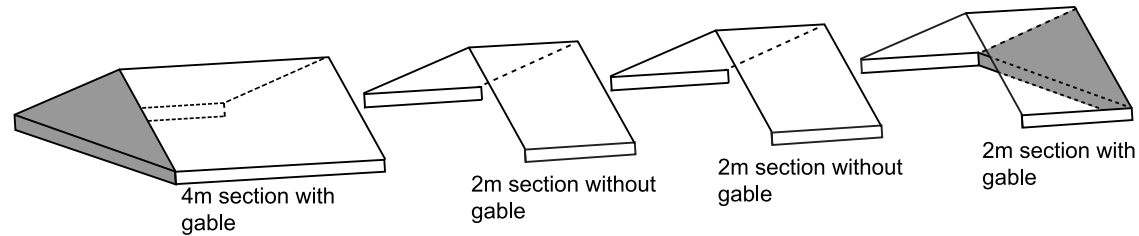

When you are making your CombiTent **shorter**. Use the velcro overlay to detach roof sections.


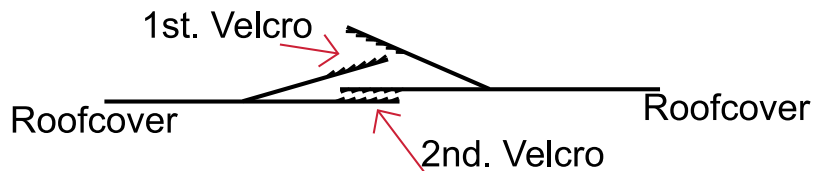


Use the velcro overlay to attach 2 roof sections to each other.

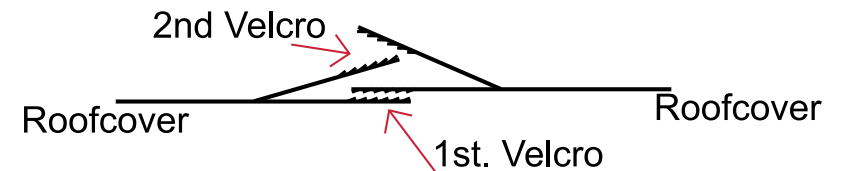

## 5m -2.3 PARTY TENT SEMI PRO


I Select a flat surface for the tent.  
Unpack the boxes and check if all listed parts are included. Assemble the roof frame by mounting parts 9-13 on the pipes (Parts 2, 3-1, 3-2, 4 & 5). Use the screws to firmly attach the parts.

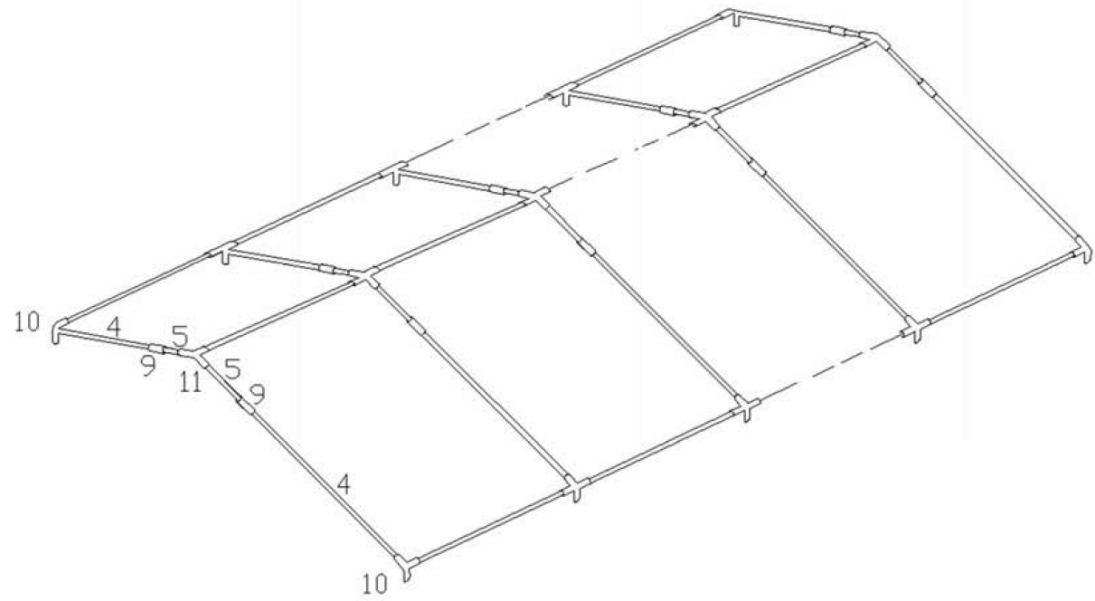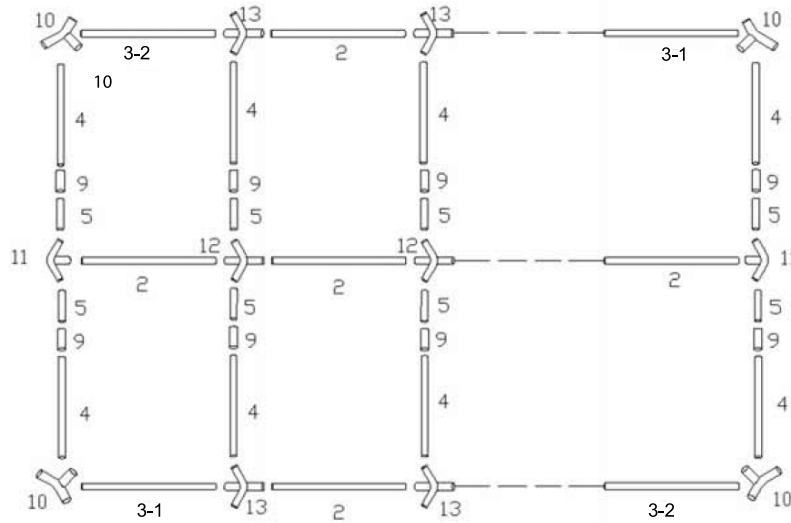

## 5m -2.3 PARTY TENT SEMI PRO

II

Lift one side of the tent frame and attach the legs(1). Attach the legs with part no. 8 to the outside in all four corners. Place the roof onto the frame and use the bungees to fasten it. Be sure not to put too much tension on the bungees in order not to make attaching the other side more difficult.

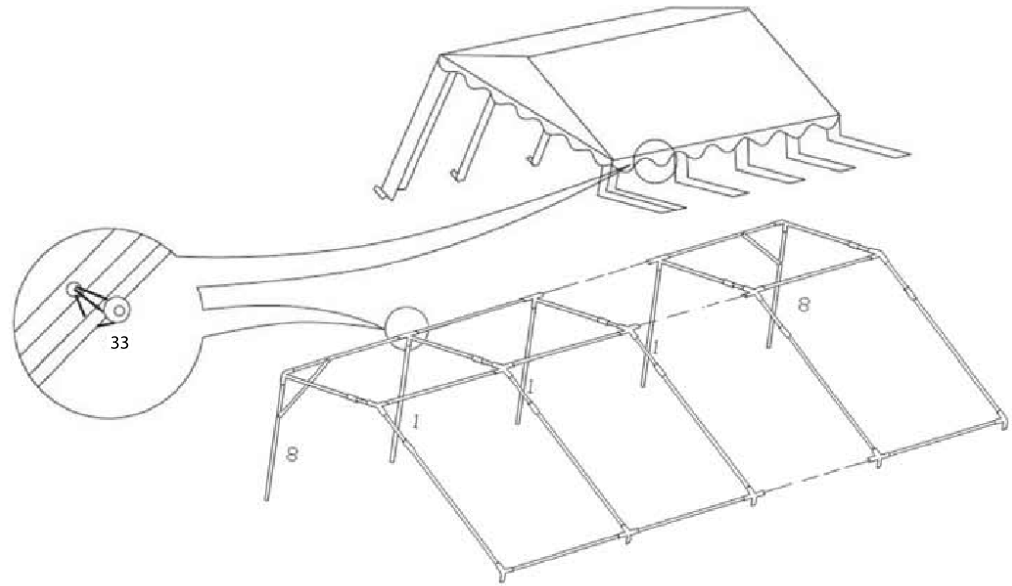

III

Attach the legs on the other side and install the feet(16,17,18,19) at the bottom. Use the long ground pegs to fasten the feet to the ground. Reinforce the side frame by attaching the diagonal pipes(6) to all four corners. Complete the bottom frame with the required pipes(2, 7) and connectors (16,17,18,19)

