

VENTLJUS


 








8m PARTYTÄLT

Sida 2-5 innehållsförteckning








Sida 6 Takduksmontering

          Sida 7-8 Monteringsanvisning


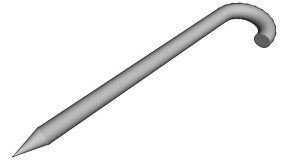 

 


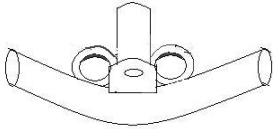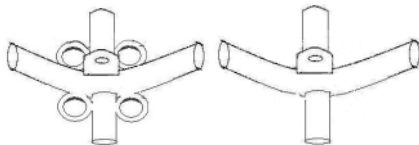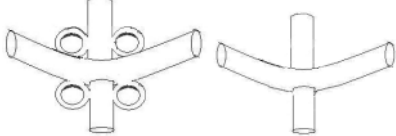

8m Series -2,6 PARTY TENT SEMI PRO, CombiTent

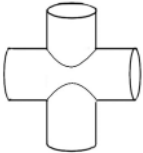Dimention		No.	8x12m Quantity	8x16m Quantity		
50X1.5MM 2188MM		1	14	18		
37x1.1mm 1880mm		2	50	64		
50X1.5MM 1950MM		3	28	36		
25x0.8mm 750mm		4	7	9		
25x0.8mm 1987mm		5	14	18		
50X1.5MM 400MM		6	14	18		
110° Three-way		7	4	4		
140° Three-way		8	2	2		
140° Four-way		9-1 9-2	2 3 no rings	3 4 no rings		
110° Four-way		10-1 10-2	4 6 no rings	6 8 no rings		









8m Series -2,6 PARTY TENT SEMI PRO, CombiTent

Dimension		No.	8x12m Quantity	8x16m Quantity		
Flat Threeway		11	4	4		
Flat fourway		12	10	14		
Foot base for corner on right		13	2	2		
Foot base for corner on left		14	2	2		
Foot base for sidewall		15-1 15-2	4 6 no rings	4 10 no rings		
Foot base for endwall		16	6	6		
Turnbuckle set for side. 4,6m		17	8	8		

8m Series -2,6 PARTY TENT SEMI PRO, CombiTent

Dimension		No.	8x12m Quantity	8x16m Quantity		
Turnbuckle set for roof. 5,6m		18	12	16		
surperpeg		19	10	14		
6x300mm spiral		20	4	4		
6x180mm		21	14	18		
4x180mm		22	56	64		
Long bungeeball		23	204	260		
rope		25	4	4		
M6X25mm screw +nut		26	28	36		

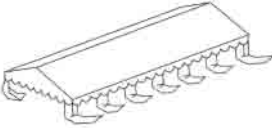  
8m Series -2,6 PARTY TENT SEMI PRO, CombiTent

Dimension		No.	8x12m Quantity	8x16m Quantity		
M8x50mm screw		29	100	135		
M8x60mm screw		30	84	106		
M8 locknut		31	184	241		
spancer		32	2	2		
roof		33	1 (4 sections)	1 (5 sections)		
sidewall		34	12	16		
endwall with large door		35	1	1		
endwall with small door		36	1	1		


8m -2.3 PARTY TENT SEMI PRO, COMBITENT

CombiTent roof explained

 
8x6

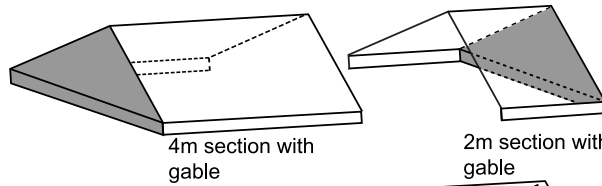


8x8

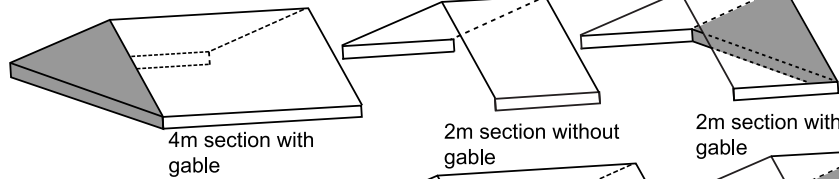 


8x10

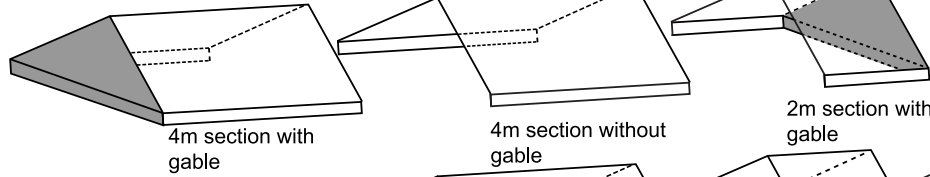 


8x12

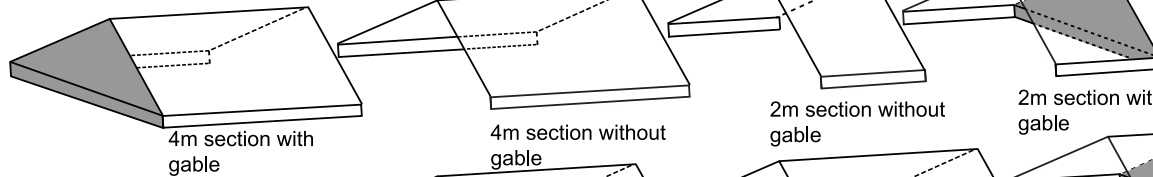 


8x14

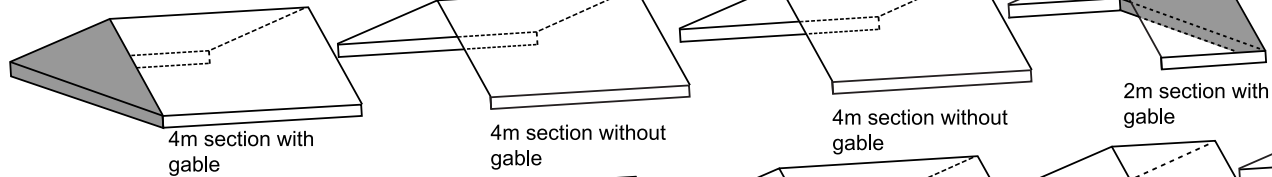 


8x16

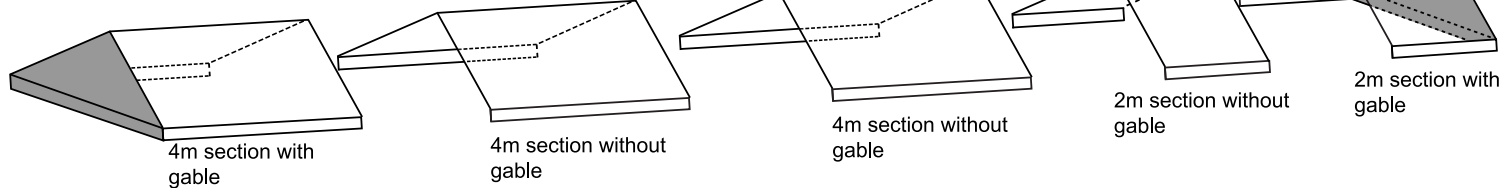 

 When you are making your CombiTent **shorter**. Use the velcro overlay to detach roof sections.

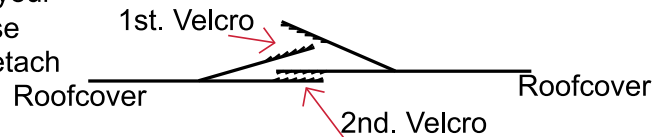

 Use the velcro overlay to attach 2 roof sections to each other.

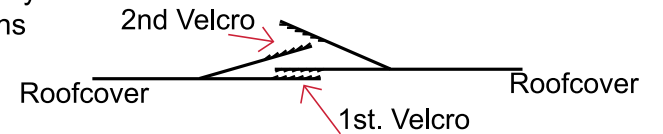


8x12 -2,6 PARTY TENT SEMI PRO, CombiTent

I


Select a flat ground for the tent, unpack the carton and check all the parts including tubes, tent and accessories... etc. are present as same as list.

 Assemble the framework of rooftop by joining the portion (7.8.9.10.11.12.) together with poles (2.3). To ensure the screw fixed to every pole tightly

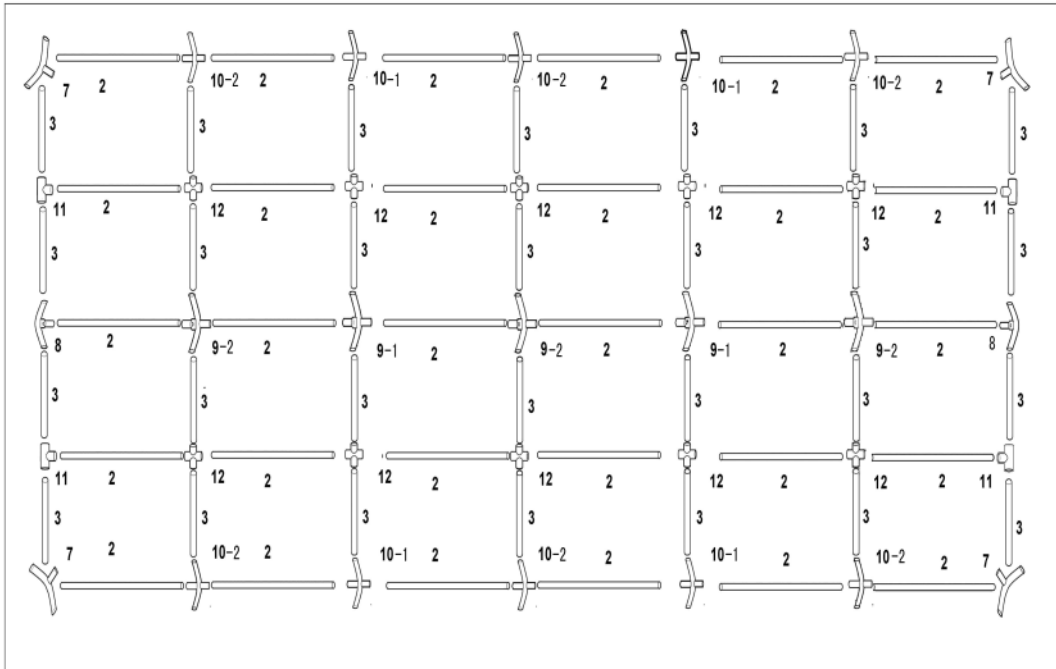


II

 Attach one end of supported pole (4.5) to the joints (8.11&9.12)

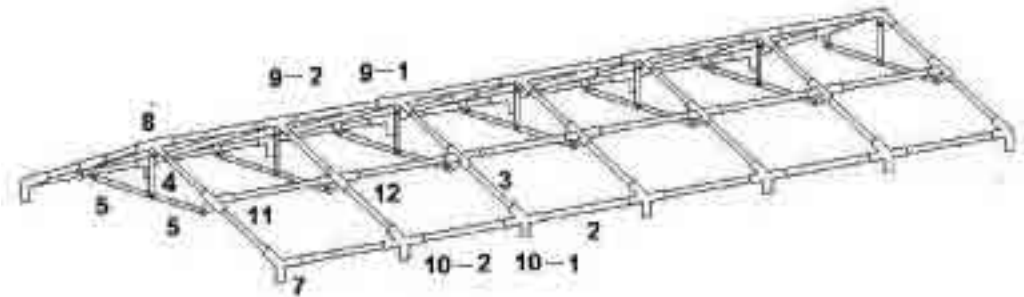

 
Fastening the roof by using turnbuckle set(18) which is diagonally across through each two section as below .

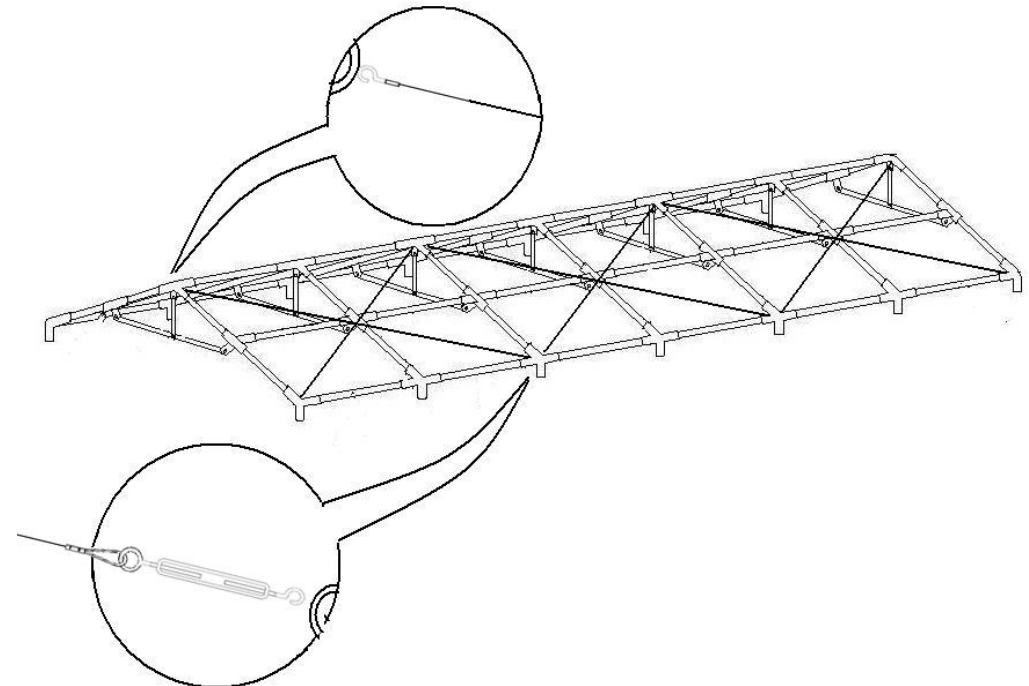

8x12 -2,6 PARTY TENT SEMI PRO, CombiTent

III

 Place the roof cover on the frame, and attach it to the frame with bungee balls. If you use too many on one side of the tent, it may become too tight to tie the other side on to the frame. Apply the legs in the one side as shown.

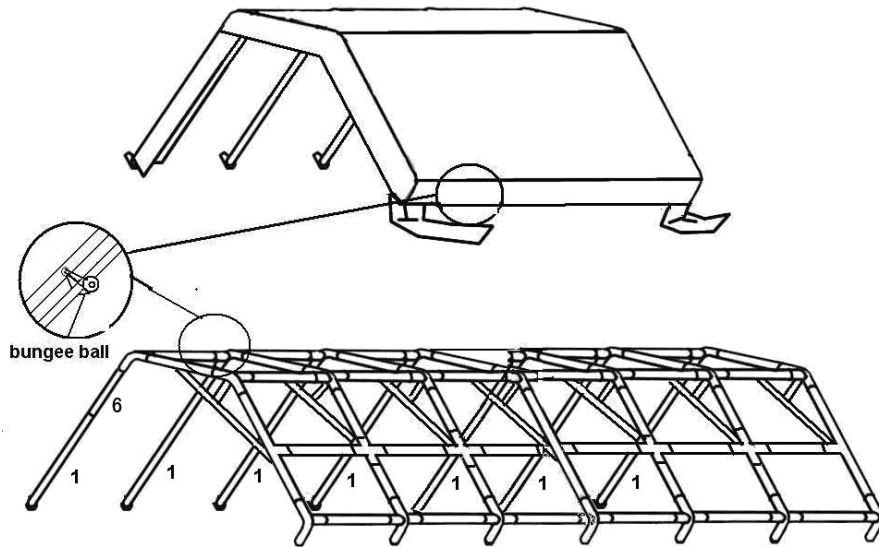

IV

Attach the another supported poles (6) to the joints (7.10), built-up the framework, use the long peg to fix each pole into the ground. Use turnbuckle sets (17) to fasten the structure the same way you did on the roof.

