

Strobe Master I

Features:

- ✓ For all DMX and analog strobes
- ✓ Controller provides 10 programmes, Blackout, Single flash, Full on
- Speed and brightness controllable via faders

Power supply unit included. DC 9 V - 500 mA

Dimensions: 210 x 133 x 77 mm

✓ Weight: 0.8 kg

Operating:



1. BLACKOUT

2. FULL ON

4. DIMMER

5. SPEED

6. MODE

7. CHASE

8. POWER

CH1 - CH4

DMX STROBE

9. DC Input

- Blackouts the stobes

- All strobes light up at once

3. SINGLE FLASH - All strobes will flash each time you press this button in Blackout mode

- To adjust the brightness of DMX strobes in a range of 20 % to 100 %

- To adjust the chase speed in Auto mode

- Yellow LED indicates = AUTO mode Green LED indicates = Sound-to-Light mode

- Press the ▲▼ buttons to select 10 chase patterns:

0 = random patterns

1 = 1234 (100 % brightness)

 $2 = 1 \rightarrow 2 \rightarrow 3 \rightarrow 4 \rightarrow 3 \rightarrow 2 \rightarrow 1$

 $3 = 1 \rightarrow 2 \rightarrow 3 \rightarrow 4 \rightarrow 3 \rightarrow 2 \rightarrow 1$

 $4 = 12 \rightarrow 34 \rightarrow 24 \rightarrow 13 \rightarrow 23 \rightarrow 14$

 $5 = 1 \rightarrow 12 \rightarrow 123 \rightarrow 1234 \rightarrow 123 \rightarrow 12 \rightarrow 1 \rightarrow$ $stop \rightarrow \rightarrow 4 \rightarrow 43 \rightarrow 432 \rightarrow 4321 \rightarrow 432 \rightarrow$

 $43 \rightarrow 4 \rightarrow \text{stop}$

 $6 = 1 \rightarrow 12 \rightarrow 123 \rightarrow 1234 \rightarrow 234 \rightarrow 34 \rightarrow 4 \rightarrow$ $stop \rightarrow \rightarrow 4 \rightarrow 43 \rightarrow 432 \rightarrow 4321 \rightarrow 321 \rightarrow$

 $21 \rightarrow 1 \rightarrow \text{stop}$

 $7 = 1 \rightarrow 3 \rightarrow 2 \rightarrow 4 \rightarrow 3 \rightarrow 1 \rightarrow 4 \rightarrow 2$

 $8 = 12 \rightarrow 23 \rightarrow 34 \rightarrow 41 \rightarrow 43 \rightarrow 43 \rightarrow 21 \rightarrow 14$

 $9 = 12 \rightarrow 123 \rightarrow 12 \rightarrow 1234$

- Mains switch to turn the unit on / off

Connect the supplied mains power

adaptor here

Outputs for analog strobes:

Signal: +12 V=; 1/4" phone jack (mono)

DMX512 output for DMX strobes: Channel 1: strobe rate, Channel 2:

Brightness

This device is intended to be used to control electronic strobe effects devices. Use the device only as described here. Any other use or use under other operating conditions is considered to be improper and may result in personal injury or property damage. No liability will be assumed for damages resulting from improper use.



Ensure that plastic bags, packaging, etc. are disposed of properly and are not within reach of babies and young children. Choking

Strobe 1 | Strobe 2 | Strobe 3 | Strobe 4 | Strobe 1 | Strobe 2 | Strobe 3 | Strobe 4

Ensure that children do not detach any small parts (e.g. knobs or the like) from the unit. They could swallow the pieces and choke! Never let children unattended use electrical devices.



To avoid eye damage caused by high light intensity, never look directly into the light source.

For the transport and protective packaging, environmentally friendly materials have been chosen that can be supplied to normal recycling. Finsure that plastic bags, packaging, etc. are properly disposed of. Do not just dispose of these materials with your normal household waste, but make sure that they are collected for recycling. Please follow the notes and markings on the packaging.

This product is subject to the European Waste Electrical and Electronic Equipment Directive (WEEE) in its currently valid version. Do not dispose with your normal household waste. Dispose of this device through an approved waste disposal firm or through your local waste facility. When discarding the device, comply with the rules and regulations that apply in your country. If in doubt, consult your local waste dis-

posal facility.